

Certificate

Certified Passive House Component

For cool, temperate climates, valid until 31 December 2015

Passive House Institute
Dr. Wolfgang Feist
64283 Darmstadt
GERMANY



Category: **Heat recovery unit**
Manufacturer: **Amalva UAB**
08200 Vilnius, LITHUANIA
Product name: **Komfovent Domekt REGO-450**

This certificate was awarded based on the following criteria:

Thermal comfort	$\theta_{\text{supply air}} \geq 16.5 \text{ °C}$ at $\theta_{\text{outdoor air}} = -10 \text{ °C}$ ¹⁾
Effective heat recovery rate	$\eta_{\text{HR,eff}} \geq 75 \%$
Electric power consumption	$P_{\text{el}} \leq 0.45 \text{ Wh/m}^3$
Airtightness	Interior and exterior air leakage rates less than 3 % of nominal air flow rate
Balancing and adjustability	Air flow balancing possible: yes Automated air flow balancing: yes
Sound insulation	Sound level $L_W \leq 35 \text{ dB(A)}$ not met Here $L_W = 52.0 \text{ dB(A)}$ Unit should be installed so that it is acoustically separated from living areas
Indoor air quality	Outdoor air filter at least F7 Extract air filter at least G4
Frost protection	Frost protection for the heat exchanger with continuous fresh air supply down to $\theta_{\text{outdoor air}} = -15 \text{ °C}$

- 1.) Condition fulfilled with an internal hydraulic heating element.
- 2.) Regenerative heat recovery - applicability to be checked

Further information can be found in the appendix of this certificate.

Certified for air flow rates of

167 – 310 m³/h

$\eta_{\text{HR,eff}}$

78 %

Electric power consumption

0.40 Wh/m³



CERTIFIED COMPONENT

Passive House Institute

Appendix to the certificate Amalva UAB, Komfovent Domekt REGO-450

Manufacturer: Amalva UAB
Ozo str. 10, 08200 Vilnius, LITHUANIA
Tel: 00370 8 5 2779701
E-Mail: info@amalva.lt, www.komfovent.lt

Passive House comfort criterion

In order to maintain a minimum supply air temperature of 16.5 °C at an outdoor air temperature of -10 °C, the device is equipped with an internal supply air heater with an electric output of about 1000 W.

Efficiency criterion (heat recovery rate)

The effective dry heat recovery rate is measured at the test facility using balanced mass flows on the outdoor air/extract air side. The boundary conditions for the measurement should be taken from the documents relating to the testing procedure.

$$\eta_{HR,eff} = \frac{(\vartheta_{ETA} - \vartheta_{EHA}) + \frac{P_{el}}{\dot{m} \cdot c_p}}{(\vartheta_{ETA} - \vartheta_{ODA})}$$

The (dry) ventilation heating load (the house is the system boundary) can be calculated using $\eta_{HR,eff}$ based on the formula $\dot{V}_{supply_air} * (1 - \eta_{HR,eff}) * 0.34 * \Delta\vartheta$ (multiplied by the infiltration rate). The rates of heat recovery are usually greater if condensation occurs in the heat exchanger. Initially, this will not be taken into account on purpose.

For this device:

$$\eta_{HR,eff} = 78 \%$$

Efficiency criterion (power consumption)

The overall electrical power consumption of the device including that for regulation, but without that for the frost protection heating, is tested at the test facility at an external pressure of 100Pa (50Pa for each of the pressure/intake sides).

For this device:

$$0.40 \text{ Wh/m}^3$$

Air tightness and insulation

Before starting the thermodynamic test, the air tightness test with respect to external leakages should be carried out in accordance with the DIBt guidelines for under pressure as well as for over pressure. The air tightness measurement with respect to internal leakages should be conducted according to the tracer gas method based on EN 308. The leakage air flows must not be greater than 3 % of the average air flow volume of the operating range of the ventilation device.

The result was obtained as followed:

Internal leakage: 0.64 %

External leakage: 0.86 %

This ventilation unit meets the airtightness requirements.

Appendix to the certificate Amalva UAB, Komfovent Domekt REGO-450

Adjustability

It must be possible to adjust the balance between the exhaust air flow rate and the outdoor air flow rate for all units.

- This unit is certified for air flow rates of **167 – 310 m³/h**
- Balancing the air flow rates of the unit is possible
 - ✓ The air flow rates are hold steady automatically (by constant flow fans)
- The users should have at least have following possibilities for adjustment:
 - ✓ Switching the system on and off
 - ✓ Synchronized adjustment of the supply air and extract air flow to basic ventilation (= 70-80 %), standard ventilation (= 100 %) and increased ventilation (= 130 %) with clear readability of the set status.
 - ✓ Depending on the demand, the user can choose between 3 operating levels that can be set manually at the control unit of the operating element.
- The device being tested here has a standby power consumption of **2.5 W** and therefore does not comply with the target value of 1 W. The device must be equipped with an additional external switch to separate the device from the electric circuit if required.
- After a power failure the device automatically continues to operate in the mode that was set before the power failure.

Acoustical testing

In order to restrict the sound pressure level in the installation room, the sound power level should be restricted to 35 dB(A). With an equivalent room absorption area of 4 m² the amounts of sound power level and sound pressure level are nearly the same (the exact value of the sound pressure level in the specific installation room can be calculated with the help of the sound protection tool (download on www.passivehouse.com)).

Installation instructions must be provided which describe how the sound level can be kept below 25 dB(A) in living areas and below 30 dB(A) in functional areas. The following sound power levels have been determined at an air flow rate of **300 m³/h**:

Sound level unit [dB(A)]	Sound level ODA [dB(A)]	Sound level SUP [dB(A)]	Sound level ETA [dB(A)]	Sound level EHA [dB(A)]
52.0	53.1	66.6	55.4	68.3

- The sound level of the unit exceeds the limit value of 35 dB(A). Therefore the unit should be installed so that it is acoustically separated from living areas.
- Silencers are recommended by the manufacturer for complying with the required sound level in the supply air and extract air rooms. Detailed information about these can be found in the full report. Dimensioning of a suitable silencer is required for the specific project on the basis of the measured sound intensity level.

Appendix to the certificate Amalva UAB, Komfovent Domekt REGO-450

Indoor air hygiene

Inspection and cleaning of the central device including the heat exchanger is simple. The filter can be replaced by the user himself/herself (no specialist required). The unit is equipped with following filter qualities:

- ✓ Outdoor Air filter F7
- ✓ Extract Air filter F7

If the device is not operated during the summer, the filter should be replaced before the next operation.

Frost protection

Appropriate measures should be taken to ensure prevention of icing over of the heat exchanger and freezing up of hydraulic post-heater coils during extreme winter temperatures (-15°C). The regular functioning of the device should be permanently ensured during uninterrupted operation of the frost protection circuit (there is no interrupt circuit for outdoor air in the Passive House, as the heating loads caused by the forced infiltration would become too high). If heater coils for hot water are used, a suitable frost protection circuit should ensure prevention of frost damage to these heater coils. In the process, the possibility of failure of the pre-heating coils and extract air fans must also be taken into consideration.

- Frost protection circuit for the heat exchanger:
 - ✓ As the unit being tested is a rotor-based heat exchanger unit, it requires no pre-heating element at -15°C. In order to satisfy the comfort criterion on the supply air, the unit does implement the use of a post-heating element operating at a power of 1000 W.
- Frost protection circuit for downstream hydraulic heater coils:
 - ✓ In order to protect a downstream hydraulic supply air heater, an undershooting of 5°C supply air temperature leads to a shutdown of the unit. In this case the display will show an error.

It should be noted that cold air can also lead to freezing up of stationary fans due to free circulation; this can only be ruled out if the air duct is closed (by means of a shut-off flap).

Abbreviations

- AU/ODA = Outdoor air
- FO/EHA = Exhaust air
- ZU/SUP = Supply air
- AB/ETA = Extract air